


MODELS RPW110, RPW112, RPW114, RPW116, RPW118, RPW120 RPW122, RPW180 AND RPW184 REPLACEMENT MICROPHONE HEAD ASSEMBLIES FOR HAND-HELD WIRELESS TRANSMITTERS

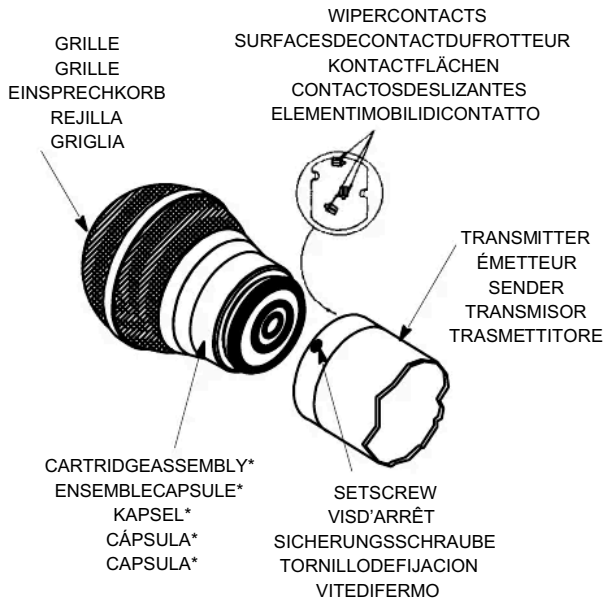

*PG58 SHOWN

CARTRIDGE-TRANSMITTER CONNECTIONS
CONNEXIONS D'ÉMETTEUR-CAPSULE
KAPSEL-SENDER VERBINDUNGEN
CONEXIONES DE LA CÁPSULA AL TRANSMISOR
CONNESSIONI PER CAPSULA AL TRASMETTITORE

The cartridges in these instructions are direct replacements for the microphone cartridges in Shure's L, LX, T, EC, SC, UC, ULX, SLX, Performance Gear, UHF, and UHF-R Series hand-held wireless microphone-transmitters. The replacement cartridge for each type of microphone-transmitter is identified in the table at right.

Replacement Cartridge	Wireless Microphone Model
RPW110 PG58 (dynamic)	
RPW112 SM58 (dynamic)	
RPW114 SM86 (condenser)	
RPW116 SM87A (condenser)	
RPW118 BETA 58A (dynamic)	
RPW120	BETA 87A (condenser)
RPW122	BETA 87C (condenser)
RPW 180 KSM9 (champagne, condenser)	
RPW184 KSM9 (black, condenser)	

These replacement cartridges are electrically and mechanically interchangeable with any Shure hand-held microphone-transmitter. The cartridges are supplied with a .035 in. (0.9 mm) hexagonal-head wrench that is necessary for cartridge removal and installation on some models.

To replace a cartridge assembly, proceed as follows:

- Using the supplied .035 in. (0.9 mm) hexagonal-head wrench, loosen the setscrew in the handle of the microphone-transmitter. No setscrew is present on the T2, LX2, SC2, U2, ULX2, SLX2, UC2, UT2, PGX2 and UR2 microphone-transmitters.
- While holding the microphone-transmitter with the grille pointing upward, unscrew the grille and cartridge by turning them counterclockwise, and remove them. The wiper contact design requires no further disconnection.

CAUTION

To avoid contaminating or damaging the gold-plated wiper contacts, do not touch or damage the contact surfaces on the cartridge or the transmitter.

- Screw the replacement cartridge onto the handle and tighten it.
- If you are using an L Series or EC Series transmitter, tighten the setscrew on the transmitter.

MODÈLES RPW110, RPW112, RPW114, RPW116, RPW118, RPW120 RPW122, RPW180 ET RPW184 ENSEMBLES DE TÊTES DE MICROPHONE DE RECHANGE POUR LES ÉMETTEURS SANS FIL À MAIN

Les capsules de microphone Shure ci-dessous sont des ensembles de rechange directs pour les capsules de microphone des microphones-émetteurs sans fil à main Shure série L, LX, T, EC, SC, UC, ULX, SLX Performance Gear, UHF, et UHF-R. Voir la table en bas.

Capsule de Rechange Pour Microphone-émetteur	
RPW110 PG58 (dynamique)	
RPW112 SM58 (dynamique)	
RPW114 SM86 (électrostatique)	
RPW116 SM87A (électrostatique)	
RPW118 BETA 58A (dynamique)	
RPW120	BETA 87A (électrostatique)
RPW122	BETA 87C (électrostatique)
RPW 180 KSM9 (champagne, condensateur)	
RPW184 KSM9 (noir, condensateur)	

Ces capsules de rechange sont interchangeables aux niveaux électriques et mécaniques avec tous les microphones-émetteurs sans fils.

Les capsules sont fournies avec une clé hexagonale 0.9 mm, requise pour le démontage et le montage de la capsule.

Pour remplacer un ensemble capsule, effectuer les opérations suivantes :

- Utiliser la clé à tête hexagonale fournie pour desserrer la vis d'arrêt seulement dans la poignée du microphone-émetteur T2, LX2, SC2, U2, ULX2, SLX2, UC2, UT2, PGX2 et UR2.
- Tout en tenant le microphone-émetteur avec la grille orientée vers le haut, dévisser la grille et la cellule dans le sens inverse des aiguilles d'une montre pour la déposer. Le frotteur est conçu de façon à ne pas exiger de débranchement supplémentaire.

ATTENTION

Pour empêcher la contamination ou l'endommagement des surfaces de contact du frotteur, ne pas toucher ni endommager ces surfaces sur la capsule ou sur l'émetteur.

- Visser la capsule de rechange dans la poignée et la serrer.
- Serrer la vis d'arrêt seulement de l'émetteur L2 ou EC2.

